



INSTALLATION

Installation and service must be performed by qualified personnel. Hand dryer must be grounded.

- Remove the two tamper-proof cover attachment screws using the supplied key. Gently remove the cover from the wallplate with a screwdriver inserted in the slot at the bottom back of the dryer.
- Unplug the power cable from the circuit board. Remove the four screws that pass through the rubber grommets and remove the mechanism from the wallplate. Remove the cover from the electrical junction box on the wallplate by loosening the single screw.
- Use the chart below to determine the correct height of the wallplate. When two or more dryers are installed, they should be placed no closer than 60cm (24") from center to center. Mark the location of the four mounting holes.
- All dryers must be fed by two power conductors and one ground wire. For wall wiring, remove the electrical knockout from the wallplate and mark the location of the wire entry. Carry the electrical wire to the dryer and attach it to the wallplate knockout using an approved connector.
- Attach the wallplate firmly to the wall. For wood walls or wood studs, use minimum No. 12 screws of proper length to ensure 25mm (1") minimum stud penetration. For masonry walls use expansion bolts or anchors for 6mm (1/4") screws of proper length to ensure penetration 6mm (1/4") deeper than anchor. Shim if necessary to ensure that the wallplate is level and flat against the wall.
- For surface wiring, remove the knockouts from the dryer cover and the electrical junction box and bring the conduit to the dryer from below. Attach the conduit to the junction box using an approved connector.

- Connect the two power leads to the power cable using the supplied wire nuts. Attach the ground wire securely to the ground screw on the wallplate. Replace the junction box cover and tighten the screw.
- Reinstall the mechanism and replace the four mechanism mounting screws. Plug the power cable into the circuit board and push firmly until it is fully seated.
- Replace the dryer cover. Slide the cover onto the wallplate horizontally and then upward while continuing to push the bottom of the cover towards the wall. The cover should hook at the top and click into place at the bottom. Replace the two tamper-proof screws, taking care not to cross-thread or over-tighten them.


IMPORTANT: After turning on electrical power, wait 5 seconds before attempting to operate dryer.

Cleaning & Maintenance

- Regularly clean exterior surfaces and wash with mild soap.
- Remove accumulated dust from air inlet areas.
- Ensure that infrared sensor lens is clean and unobstructed.


Once per year, or more frequently if dryer is installed in a dusty, greasy, or heavy use environment:

- IMPORTANT:** Turn off the breaker at electrical panel or source.
- Remove cover.
- Remove accumulated dust from mechanism.
- Replace cover and restore power.

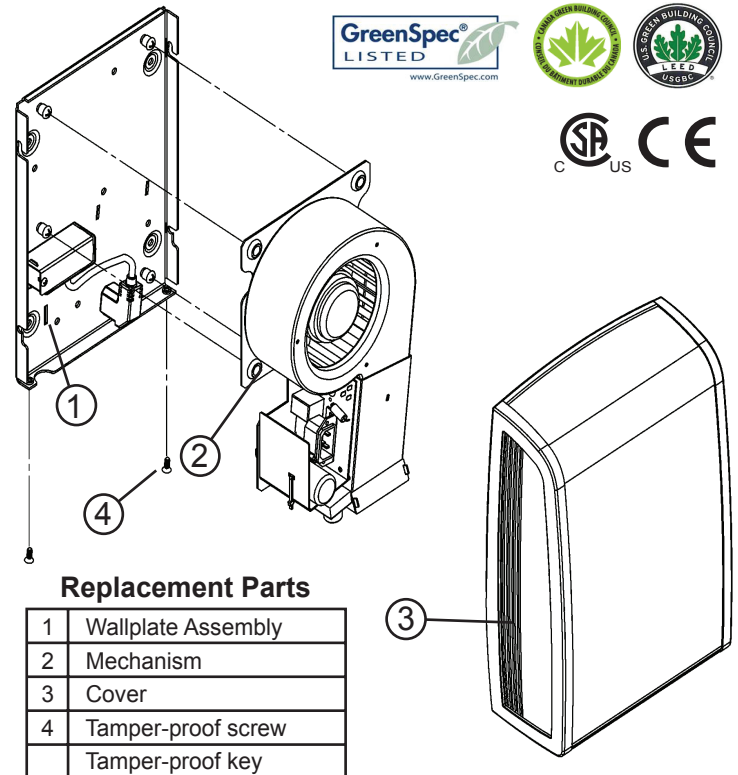

Replacement Parts

1	Wallplate Assembly
2	Mechanism
3	Cover
4	Tamper-proof screw
	Tamper-proof key

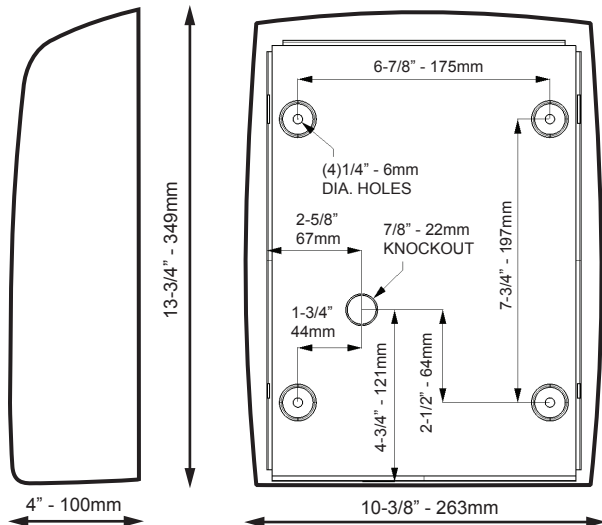

Distance from bottom edge of dryer to floor:

Men	47 in	119 cm
Women	44 in	112 cm
Children 8-10 years	35 in	89 cm
Children 11-13 years	38 in	97 cm
Children 14-16 years	44 in	112 cm
Disabled	36 in	91 cm



Corporate Headquarters
www.comaccorporation.com
9005B, boul du Quartier, Brossard, Qc, J4Y 0A8

Customer Service

Tel: 450-659-9899 • 800-409-4583 • Fax: 450-659-3412 • 855-855-5303